

Setting Device :

Remote model :



**JREMO 6K+**

Setting Place :

Supplier :

### CRANE & HOIST Single 7P/B

22 Core Cable

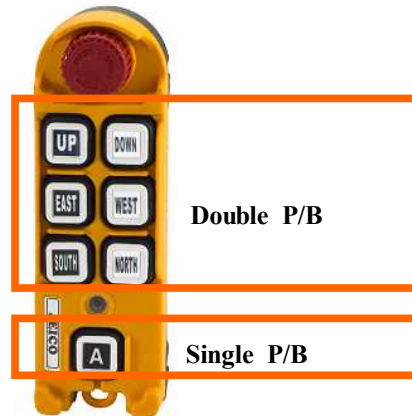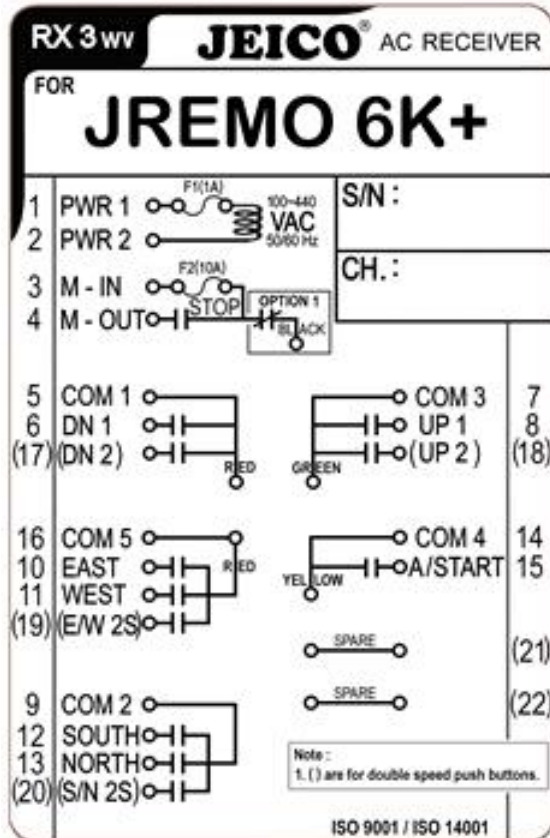

RX3



RX Antenna Incl.

#### ■ TX & RX Size

-TX : 148 x 48 x 45 mm, Approx. 185 Gr.

-RX3 : 90 x 215 x 105 mm, Approx. 1,350 Gr.(Cable & Setting plate Incl.)

-IP level : IP55(TX), IP66(RX) - Locking system : Y

#### ■ Stanby (Standard) : EMS UP ⇔ P/B Main ON & Start.

(Option) : EMS UP ⇔ Last P/B Start

#### ■ Cable SEPC. : 0.75 SQ, 600VAC, 1.7M, 22 CORE number cable.

#### ■ RELAY SPEC. : "A" CONTACT, 250VAC/5A, 125VAC /10A

#### ■ FUSE (20MM Glass Fuse) 1A(F1),10A(F2)

#### ■ INPUT POWER : AC 100~440V 50/60Hz, DC 12~40V (opt. ~60V)

NOTE 1 : For No.15 Cable functions are only for single p/b, suffix A or START and useful for additional functions needed such as light, horn, brake open, etc.

NOTE 2 : For D.C.(suffix M) diagram is not included in this manual and when required consult adjacent JEICO agent and/or supplier.